



## DIGITAL INSULATION/CONTINUITY TESTERS KEW 3021A/3022A/3023A



## KEW 3021A/3022A/3023A Specifications


	3021A				3022A				3023A				
nsulation resistance													
Test voltage	125V	250V	500V	1000V	50V	100V	250V	500V	100V	250V	500V	1000V	
Measuring range	4.000/40.00/	00/40.00/		000M0	4.000/40.00/		4.000/40.00/		4.000/40.00/	4.000/40.00/			
(Auto range)	200.0ΜΩ 4.000/4		0.00/400.0/2000IVIL1		200.0ΜΩ		400.0/2000ΜΩ		200.0ΜΩ	400.0/2000ΜΩ			
First Effective Measuring range	0.2 - 20ΜΩ	MΩ   0.2 - 40MΩ   0.2 - 200MΩ   0.2 - 10		0.2 - 1000ΜΩ	0.2 - 20ΜΩ		0.2 - 40ΜΩ	0.2 - 200ΜΩ	0.2 - 20ΜΩ	0.2 - 40ΜΩ	0.2 - 200ΜΩ	0.2 - 1000ΜΩ	
Mid-scale value	5ΜΩ		50ΜΩ		5ΜΩ		50ΜΩ		5ΜΩ		50ΜΩ		
Accuracy		±2%rd	±6dgt		±2%rdg±6dgt			±2%rdg±6dgt					
Second effective measuring range	0.110 - 0.199ΜΩ												
	20.01 - 200.0MΩ	40.01 - 2000ΜΩ	200.1 - 2000ΜΩ	1001 - 2000ΜΩ	20.01 - 3	200.0ΜΩ	40.1 - 2000ΜΩ	200.1 - 2000ΜΩ	20.01 - 200.0MΩ	40.01 - 2000ΜΩ	200.1 - 2000ΜΩ	1001 - 2000ΜΩ	
Accuracy		±5%rd	g±6dgt		±5%rdg±6dgt				±5%rdg±6dgt				
Rated current	DC1.0 - 1.2mA												
Short circuit current	DC1.5mA MAX												
Ω/Continuity													
Auto range	40.00/400.0 Ω												
Accuracy	±2%rdg±8dgt												
Output Voltage on	5V±20%												
open circuit													
Short circuit current	DC220±20mA												
Fuse	Quick acting ceramic fuse 0.5A/600V ( $\phi$ 6.35 $ imes$ 32mm)												
/oltage measurement								00017					
Range	AC 20-600V(50/60Hz) DC ±20-600V												
Accuracy	Data hold		• Zero O	AD I	±3%rdg±6dgt  • Auto discharge • Bar graph display				Memory				
ther function						0	0 1 1 7		,		Remote measurement		
	Live circuit warning     Auto power off		wer on	Battery alarm     Backlight				Safety lock		nemote measurement			
General Safety standard				IEC 61010	1 CATII CO	0\/ IEO61 <i>EE</i> 7	1.0.4.150610	06.1 JEC.60	E00 (ID40)				
Dimensions / Weight	IEC 61010-1 CATⅢ 600V IEC61557-1,2,4 IEC61326-1、IEC 60529 (IP40)  105(L) × 158(W) × 70(D)mm / 600g approx. including batteries												
Power source	R6L/R6LAVI 5V) × 70(D) TITLE OCCUPATION OCCU												
Accessories		7150A (Test lead with remote control switch set), 8923 (Fuse 0.5A/600V), 9121 (Shoulder strap), R6 (AA) × 6, Instruction Manual											
Optional	7115 (Extension Probe), 8016 (Hook type prod), 9089 (Carrying case)												

## **Comparator Function**

Select and set the standard resistance value in each measuring range, and compare it with readings.

Notice the result of comparison by the **FAIL** or **PASS** sign on the display, and by buzzer sound in same time.

Buzzer can be set either for **FAIL** or **PASS** at your choice.

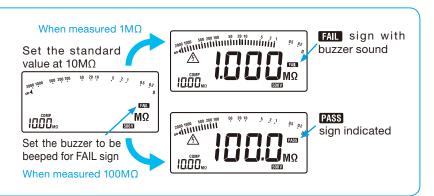

## Accessories 7150A[Test lead with remote control swich set]







Please read the "Safety Warnings" in the instruction manual supplied with the instrument thoroughly and completely for correct use. Failure to follow the safety rules can cause fire, trouble, electrical shock, etc. Therefore, make sure to operate the instrument on a correct power supply and voltage rating marked on each instrument.

For inquires or orders :



1.800.561.8187



information@itm.com